

CRUSADER Dishwashing

ALWAYS

Read the product label/Safety Data Sheet before use.
Adhere to health and safety instructions.
Wear appropriate personal protective equipment (PPE).
Descale machine regularly to maintain efficiency.

PRE-CLEAN

Switch on machine and ensure correct operating temperature.

Recommended:
Wash 55-70°C
Rinse 82-90°C

Scrape food from crockery into bin.

PRE-RINSE

Rinse with clean water.

RACK

Load cutlery into baskets - handle down.

Rack plates in same direction.

Empty cups and load upside down.

 
Do not overload trays.

WASHING AND RINSING

Choose a dishwash product relevant to water hardness.

Switch on dosing equipment (if fitted).

Check sufficient product is in chemical drums.

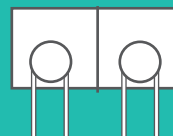

STACKING

Crockery must be dry before stacking.

 
CLOSE DOWN

Switch off and drain dishwasher.

Remove and empty scrap tray.
Remove curtain and filter plate then clean the interior surfaces thoroughly with a sanitiser.
Leave for 30 seconds then wipe with a clean cloth.

Spray sanitiser onto a clean cloth and wipe the door and hood seals, as they are prone to bacterial growth.

Allow to air dry with the door open.

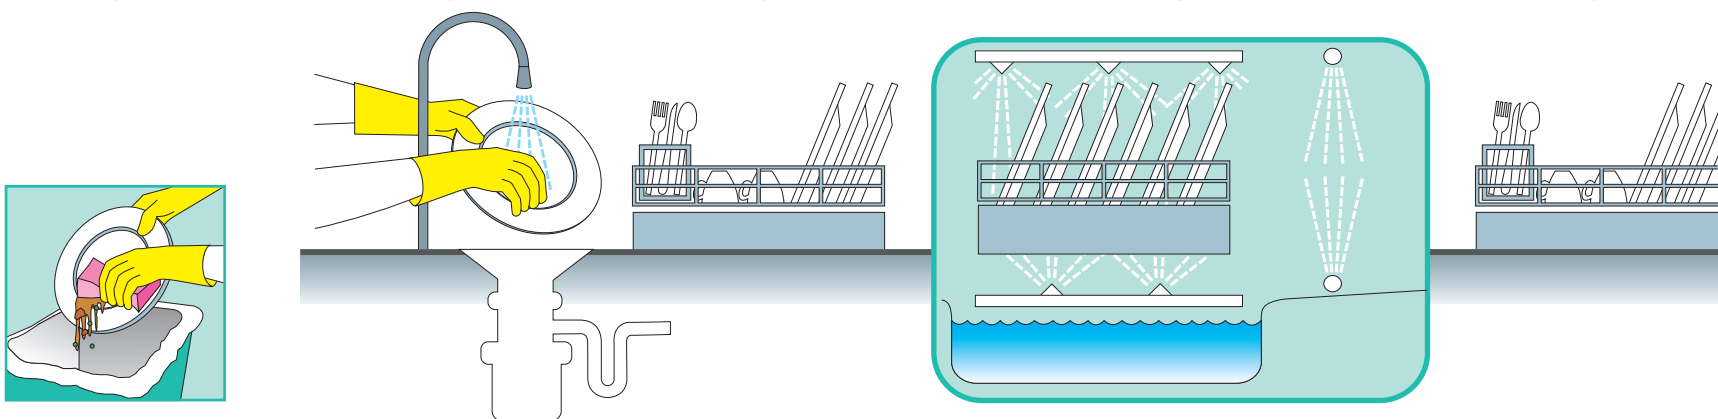

EVANS CRUSADER PRODUCTS WILL CLEAN CROCKERY AND UTENSILS AND WILL ALSO MAINTAIN YOUR MACHINE

WASH



Choice of Dishwash detergent to meet your requirements.

RINSE



Choice of Rinse Aid to complement your preferred dishwash.

DESCALE



To maintain your machine. Removes: limescale and heavy soiling.

DESTAIN



Removes stains and built-up protein deposits.

SANITISE



Use to sanitise the interior and exterior surfaces of your dishwasher machine.