WAREDOSE 35

Troubleshooting guide



SYMPTOM	PROBABLE CAUSE	REMEDY
Display does not illuminate	Unit has been turned off. Check fuses on the circuit boards	Make sure unit is turned on. Check input terminals on board for correct input voltage. Refer to the circuit board diagram. Check the flat cable from the circuit board to the display.
Pump(s) do not run	Not receiving a signal to operate. Faulty motor.	Prime the pump. Hold the centre and either right or left button giving you the option to prime. If the pump operates there may be a signal issue. Unit needs replacing.
Too much detergent or rinse aid	Unit has not been calibrated correctly. Unit is receiving multiple unnecessary signals. Dosage rates are incorrect.	Check calibration Check signals. Check dosage rates
Too little detergent or rinse aid	Unit has not been calibrated correctly. Unit is receiving multiple unnecessary signals. Dosage rates are incorrect.	Check calibration Check signals. Check dosage rates
Pump(s) run too slowly	Problem with the squeeze tube. Pump becoming faulty.	Check for lubrication on squeeze tube. Replace pump.
Loss of pump(s) prime	Problem with the tubing. Pickup lines have holes or air leaks. Squeeze tube could have pin holes or be cracked Tubing could be deteriorated.	1 Replace faulty tubing.

ROUTINE MAINTENANCE			
TUBE REPLACEMENT:	REMOVE THE TUBE	INSERT THE TUBE	
Disconnect the power supply.	Remove the connection on the left from its seat by lifting it; keeping hold of the connector with one hand rotate the	Insert the connector in the left seat with the round edge on the bottom; rotate the roller holder clockwise so that the cross piece pushes the tube into its natural seat; finally insert the	
Once complete	roller holder clockwise, until you can lift	second connection into its seat on the right.	
reconnect the power supply and	the connector on the right from its seat.		
prime the unit			







