



ICE CREAM EQUIPMENT

3 STEP CLEANING SYSTEM

SCOOP



Step 1

For initial clean, make up a solution of 1 part Est-eeem to 25 parts water in a container. Dip and shake scoop to remove the majority of ice cream.

Step 2

Make up a separate solution of 1 part Est-eeem to 25 parts water in a container. Dip and shake scoop to sanitise.

Step 3

Rinse with clean water prior to use.

CHANGE SOLUTION REGULARLY




Step 1

3 x  into 2.5 L water




Step 2

3 x  into 2.5 L water



MACHINE

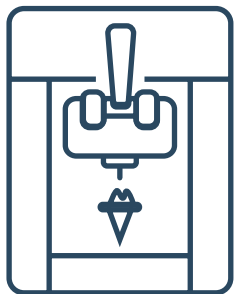

Step 1

For initial clean, make up a solution of 1 part Est-eeem to 25 parts warm water and operate the machine to draw solution through the dispensing system.

Step 2

Make up a solution of 1 part Est-eeem to 25 parts warm water and operate the machine to draw solution into the dispensing system and leave overnight.

Step 3

Pump clean water through the dispensing system prior to use.



Step 1

6 x  into 5 L water



Step 2

6 x  into 5 L water

