EVANS EVOLVE

Evans Evolve disposable cartridges, for liquid and foam.

Evans' hand care products offer thorough cleansing, yet are mild and gentle on the skin. All comply with Cosmetic Regulation. All contain added moisturiser to help keep the skin feeling soft, smooth and healthy, and the balanced pH ensures they are suitable for frequent use.

Black Pepper & Bergamot Hand hair and body wash







Citrus Foam

Foaming hand and body wash



Trigon™

EVANS EVOLVE

Unperfumed hand wash

- High quality liquid hand wash
- Unperfumed; suitable in food areas
- Product code: A050BEV 6x1L



Trigon™ Plus

Bactericidal unperfumed liquid hand wash

- Passes EN 1499, EN 1276 and EN 13727
- Unperfumed; suitable in food areas



Trigon™ Foam Plus

Bactericidal unperfumed foaming hand wash

- Passes EN 1499, EN 1276 and EN 13727; kills 99.999% bacteria
- Unperfumed: suitable in food areas. Economical in use
- Product code: A063BEV 6x1L



Handsan™

- Kills bacteria, enveloped viruses and yeast





EVANS EVOLVE CARTRIDGE DISPENSER



A modern designed soap dispenser to complement any decor. The smooth ergonomic design minimises dirt traps, makes it easy to keep clean and is strong and very durable.

The Evolve Cartridge Dispenser is especially manufactured to only accept an Evans disposable cartridge. Each cartridge is sealed to prevent contamination and has a unique connecting design which makes re-loading quick and easy.

The dispenser is individually boxed and supplied with installation instructions, fixing template, dispenser key, fixing screws and adhesive fixing pads. It also comes with a special fitting which enables the dispenser to be opened without the key.

Product ID labels are available upon request, for display on the front of the dispenser.




DISPENSER INSTRUCTIONS

UNLOCKING DISPENSER





To open dispenser, insert the key provided into top of dispenser. Push down to release catch and pull front cover towards you.

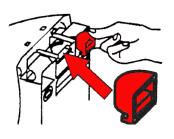



To convert dispenser for use without a key, insert the special fitting prior to fixing dispenser to wall.

INSERTING THE EVANS CARTRIDGE



Read the cartridge label and remove red transit cap.



Insert cartridge with label facing towards the rear of dispenser. Push down cartridge until it clicks into place, piercing the inner seal.



Close front cover of the dispenser until it clicks into the locked position.


Push the dispenser 2 or 3 times to ensure liquid is drawn through the valve and primed ready for use.

MAINTAINING DISPENSER



When the cartridge is empty and needs to be replaced, we recommend the valve is removed and rinsed with clean water.



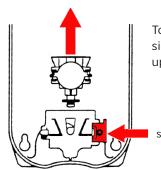

To release valve, push in side catch and lift valve upwards.

side catch







